

Fitting, Care and Use Instructions for Twist and Lock Wall Mounted Bathroom fittings:

Fixing Components Supplied

Only use the fixing components supplied with this product.

A/ Decorative Cap(s) B/ Plastic Washer(s) C/ Bracket(s) D/ Suction Cup(s)

Installation Guide

This product must only be used on hard, smooth, shiny, flat surfaces.

PREPARATION

- Thoroughly clean the mounting surface to remove any lime-scale, soap residue, bath oils or other substances including residue from abrasive and chemical cleaners that may reduce the sucker performance.
- Rinse the mounting surface with clean water and dry with a clean cloth.
- To remove any dust etc. that has accumulated since manufacture, unwind the sucker, rinse in warm water and then dry with a clean cloth. The sucker can now be reassembled with the product.




FIXING PROCEDURE

- 1) Ensure that the decorative cap(s) is rotated fully clockwise until tight, as shown in Fig 1.
- 2) Then loosen the decorative cap(s) by turning it through 5 complete rotations anti-clockwise, as shown in Fig 2. This will ensure that the sucker(s) is in the optimum position for fitting to the mounting surface.
- 3) Moisten the suction cap(s) and place the product in the desired position on the mounting surface.

DO NOT POSITION SUCKER(S) OVER GROUTED AREAS, ON TILE JOINTS.

- 4) Press the centre of the decorative cap(s) against the mounting surface. While maintaining pressure, tighten the decorative cap(s) by rotating clockwise as far as possible. See Fig 3.

Check that the product is securely fixed to the mounting surface before use !

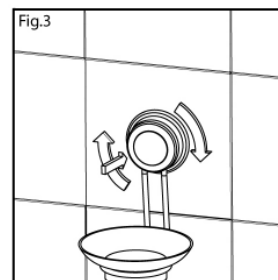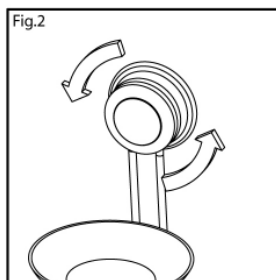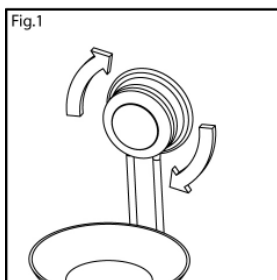

Fitting, Care and Use Instructions for Twist and Lock Wall Mounted Bathroom fittings:

Removal Guide

Unscrew and remove the decorative cap(s) and plastic washer(s) while supporting the product. Remove the product and the wall bracket(s) from the threaded stud(s) on the sucker(s). The sucker(s) can then be peeled from the mounting surface. Reassemble in the reverse order.

Warnings and Cautions:

- Do not leave small children unattended in the bath or shower.
- Do not position the sucker(s) over grouted areas between tiles.
- Check that the product is securely fixed to the mounting surface before use.
- Do not use this product as a grab bar or security rail.
- Do not store glass on or in this product and ensure that any load is evenly distributed.
- Do not overload the product – the maximum safe load of this product is 2kg (4.5 lbs).

Care and Maintenance

- Do not use abrasive or chemical cleaners – wipe with a soft, damp cloth.
- To maintain suction strength, we recommend that the sucker(s) are detached periodically e.g. every 4-6 weeks and the supporting surfaces are cleaned thoroughly.
- The accessory should be removed, cleaned and refitted if there are any indications of movement, slippage, or if the product has suffered any impact or knocks.

Information provided by www.shower-spares.co.uk